

## TECHNICAL SPECIFICATION

Model No.	ELECTRIC KETTLE, KET501
Capacity	500 ml
Power	1000W
Voltage	230V
Frequency	50Hz

# EVEREADY

*Appliances*



## ELECTRIC KETTLE



**EVEREADY** >>>  
INDUSTRIES INDIA LTD.

1, Middleton Street, Kolkata-700071, India  
Consumer Care - address as above - Ph. 1800-102-4041  
Email: [appliancecare@eveready.co.in](mailto:appliancecare@eveready.co.in)

**KET501**

**2YEAR**  
WARRANTY

**1000W**

**USER MANUAL**

\* Images are only indicative.  
Actual product may differ from the one shown on the carton.

## IMPORTANT SAFEGUARDS


This product is designed and intended for household use only.

Please read all the instructions carefully before using Eveready Electric Kettle, even if you are familiar with the product then also place it handy for ready-reference.

1. Before connecting the appliance to the power-socket, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the Kettle.
2. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
3. Do not place the Kettle on or near a hot gas or electric burner or a heated oven.
4. Do not operate the Kettle empty to avoid damaging the heating element.
5. Ensure that the Kettle is used on a firm and flat surface.
6. Do not immerse the power cord or plug in water or any other liquid.
7. Avoid contact with the inner spout while water is boiling or has been just boiled.
8. Always take care to pour boiling water slowly and carefully without tipping the appliance.
9. Be careful while refilling when the kettle is hot.
10. Keep the product out of reach of children at all times. Close supervision is necessary when used by physically challenged person / by people who lack experience in using the appliance.
11. Do not touch the hot surface. Use handle at all times.

12. The attached base can not be used for other than intended use.
13. Extreme caution must be used when moving the appliance containing hot water.
14. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
15. Unplug from the outlet when not in use and before cleaning. Allow the Kettle to cool before putting on or taking off parts, and before cleaning the appliance.
16. To disconnect, first turn the knob to "OFF", then remove the plug from power socket.
17. Do not operate the product when it is damaged or when it works improperly. Bring the product to nearest authorized service facility for testing, repairs or adjustments to avoid hazards.
18. Do not use the appliance for other than intended use.
19. Kettle is only meant for boiling water. No other liquid should be boiled to avoid hazard.
23. If the Kettle is overfilled, boiling water may spill out.

## PARTS IDENTIFICATION

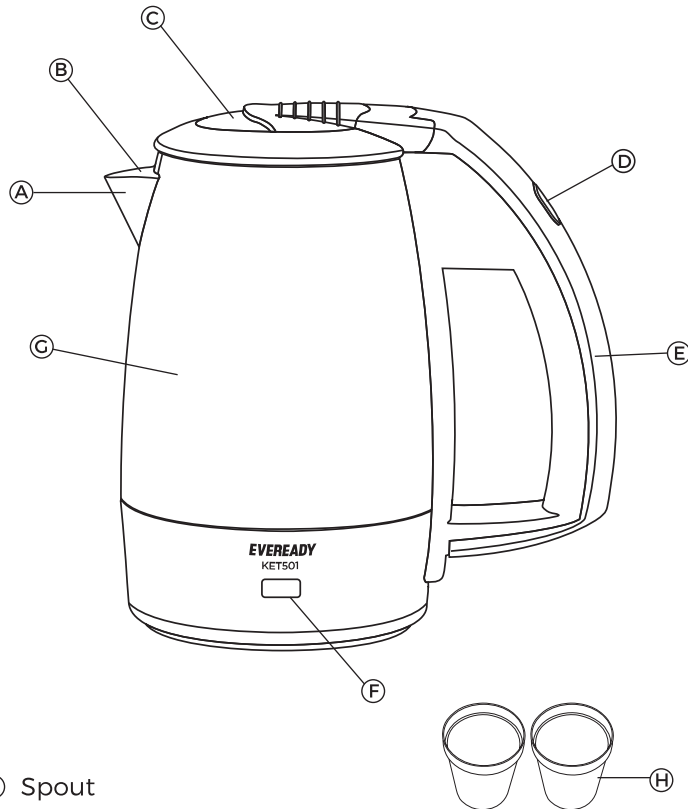

- (A) Spout
- (B) Filter
- (C) Lid
- (D) Power switch
- (E) Handle
- (F) Power on indicator light
- (G) Stainless steel body
- (H) Two additional cups

## OPERATION

Fill the Kettle with water. Do not overfill the Kettle above the max mark.

### BOILING WATER

1. Place the Kettle with the spout facing away from you. Gently lift to open the lid.
2. Fill the Kettle with as much fresh water as you will need. The maximum amount of water to be used is indicated by the 'MAX FILL' level.
3. Replace lid on the Kettle.
4. Depress the power "ON" switch gently. When the water has boiled, the Kettle will automatically switch "OFF".

**NOTE:** The Kettle can be switched off at any time before the water boils simply by putting power off.

5. If you wish to re-boil water, pour water into the kettle and power on.

## CLEANING

1. For cleaning inside of Kettle, fill Kettle till half level and add 5ml of white vinegar. Boil this mixture for 5-10 minutes.
2. After boiling, switch off power supply. Empty the Kettle, thoroughly rinse atleast 3-4 times to remove residue particles. Boil plain water 2-3 times and drain before commencing regular use.

## CAUTION

1. Always disconnect from the main supply before boiling or emptying the Kettle and always switch off the power point when it is not in use.
2. Never immerse your Kettle in water or allow water to come into contact with the terminal pins.
3. Do not allow power cord to overhang bench or table or get in touch with any hot surfaces.