

# EVEREADY

Appliances



## ELECTRIC KETTLE



**EVEREADY** >>>  
INDUSTRIES INDIA LTD.

1, Middleton Street, Kolkata-700071, India  
Consumer Care - address as above - Ph. 1800-102-4041  
Email: appliancecare@eveready.co.in

**KET502**

**2 YEAR  
WARRANTY**

**1100W**

**USER MANUAL**

\* Images are only indicative.  
Actual product may differ from the one shown on the carton.

## IMPORTANT SAFEGUARDS

This product is designed and intended for the household use only.

Please read all the instructions carefully before using Eveready Electric Kettle. Even if you are familiar with the product, then also place it handy for ready-reference.

1. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (Underside the kettle and the base) corresponds with the voltage in your home. If this is not the case, contact your dealer and stop using the kettle.
2. Do not let the cord hang over the edge of a table or counter or keep in touch with a hot surface.
3. Do not place the kettle on or near a hot gas or electric burner or in a heated oven.
4. Do not operate the appliance without anything in it to avoid damaging the heating elements.
5. Ensure that the kettle is used on a firm and flat surface and kept out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
6. To protect against a fire, electric shock or personal injury, do not immerse the cord, electric plugs or kettle in water or other liquids.
7. While water is boiling, or just after the water has been boiled, avoid contacting with the steam coming out from the spout.
8. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
9. Be careful of refilling when the kettle is hot.
10. This appliance is not intended for use by persons (Including children) with reduced physical, sensory or mental capabilities, or lack of any experience and knowledge about it, unless they have been given supervision or instruction, concerning the use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Do not touch the hot surface. Always use the handle or the button.
13. The attached base can not be used for other than it's intended use.
14. Extreme caution must be taken when moving an appliance containing hot water.
15. The kettle is for household use only. Do not use it at outdoors.
16. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
17. Unplug the kettle from the outlet, when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance also.
18. To disconnect, turn any control to "OFF", then remove the plug from the wall outlet.
19. If the supply cord is damaged, bring the product to the nearest Eveready Authorized Service facility for testing, repairs or adjustments to avoid hazards.
20. Do not use the appliance for other than it's intended use.
21. The kettle can only be used with the base provided.
22. If the kettle is overfilled, boiling water may spill out.
23. Always ensure that the lid is closed and do not lift it up while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
24. This appliance is intended to be used in the household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type of environments;
  - Bed and breakfast type of environments.

## PARTS IDENTIFICATION



- (A) Spout
- (B) Lid
- (C) Handle
- (D) Power on switch
- (E) Heating indicator light
- (F) Base for 360° operation
- (C) High quality plastic body

## BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling the Max capacity of water once and then discarding the water. Wipe the surface with a damp cloth.

**NOTE:** The Max capacity of the kettle is 1.0L.

## USING YOUR WATER KETTLE

1. Place the unit on any levelled surface.
2. To fill the kettle, remove it from the power base and then open the lid by pressing the lid release button, fill it with the desired amount of water, and then close the lid. Alternatively, the kettle may be filled through the spout. The water level should not exceed MAX marks or get below MIN level. Too little water will cause the kettle switching off before the water has boiled.

**NOTE:** Do not fill the water over the maximum level, as that excess water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging the power outlet.

3. Position the kettle on the power base.
4. Connect the plug into a power outlet. Press down the ON/OFF switch, the indicator will light up. Then the kettle will start to boil the water, once the water has been boiled, the ON/OFF switch will be off automatically. You can shut off the power by lifting the ON/OFF switch at any moment during boiling water. If you want to boil the water again, only press down the ON/OFF switch directly to restart the kettle.

**NOTE:** Ensure that the ON/OFF switch is free of obstructions and the lid is firmly closed, the kettle will not turn off, if the switch is constrained or if the lid is opening.

5. Lift the kettle from the power base and then pour out the water.

**NOTE:** Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.

- The kettle will not re-boil until the ON/OFF switch is pressed down again. The kettle may be stored on the power base when not in use.

**NOTE:** Always disconnect the power supply when the appliance is not in use.

### BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water! then the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool down before filling with cold water to reboil.

### CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet and cool it down completely before cleaning.

- Never immerse the kettle, power cord or power base in the water, or allow moisture to get in contact with these parts.
- Wipe the appliance body with a damp cloth or cleaner, never use a poisonous cleaner.
- Remember to clean the filter at a regular interval. For easier cleaning, detach the filter and then replace it after cleaning.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

- When not in use, the power cord can be stored at the bottom of the appliance.

### REMOVAL OF ALL MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale at the bottom of the kettle interior so as to cause the operation with less efficiency. You can use the commercially available descaler and follow the instructions on the package of that descaler. Alternatively, you may follow the below instructions to use the white vinegar.

- Fill the kettle with 3 cups of white vinegar, then add water to the amount so as to cover the bottom of the kettle completely. Leave the solution in the kettle overnight.
- Then discard the mixture in the kettle, and filling the kettle with clean water, boiling and then again discard the water. Repeat this process for several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

### TECHNICAL SPECIFICATION

Model No.	ELECTRIC KETTLE, KET502
Capacity	1.0 L
Power	1100W
Voltage	230V
Frequency	50Hz