

# EVEREADY

Appliances



## CHOPPER



**EVEREADY >>>**  
INDUSTRIES INDIA LTD.

1, Middleton Street, Kolkata-700071, India  
Consumer Care - address as above - Ph. 1800-102-4041  
Email: [appliancecare@eveready.co.in](mailto:appliancecare@eveready.co.in)

**CHH102**

**2 YEAR  
WARRANTY**

**250W**

**USER MANUAL**

\*Images are only indicative.  
Actual product may differ from the one shown on the carton.

## IMPORTANT SAFEGUARDS


This product is designed and intended for household use only.

Please read all the instructions carefully before using Eveready Chopper, even if you are familiar with the product then also place it handy for ready-reference.

1. Ensure that the voltage specified on rating label corresponds to your house power supply voltage before plugging in.
2. Do not immerse the plug or the power cord in water or any other liquid.
3. Never operate the product unless bowl and lid are secured in place and do not leave it unattended.
4. Do not operate the Chopper with empty bowl.
5. Chopper bowl provided with this product should not be used for storage or other uses.
6. Stop operating the product when it is damaged or it works improperly. Bring the product to nearest authorized service facility for testing, repair or adjustments to avoid hazards.
7. Switch off and remove the plug from the power outlet when not in use and before assembling and disassembling parts, cleaning and maintenance of the appliance.
8. When using extension cord make sure the extension cord is properly wired and rated for its use.
9. Never leave the product unattended when it is connected to main supply outlet.
10. Do not let the cord hang over the cooking counter or touch hot surface.
11. When unattended and while fixing jars, ensure that operating switch is off.
12. Keep the product out of reach of children at all times. Close supervision is necessary when used by physically challenged person or by people who lack experience in using the appliance.

13. Do not abuse the power cord. Never carry the product by the cord or yank it to disconnect, instead hold the plug and pull out.
14. The use of attachment or accessories not recommended or sold by Eveready may result in fire, electric shock or injuries.
15. To clean, wipe the exterior of motor unit with a damp cloth.
16. Handle chopping blades carefully since they have sharp edges.
17. Do not operate or place any part of this product on/near any hot surface (Such as gas or electric burner or a heated oven).

## PARTS IDENTIFICATION

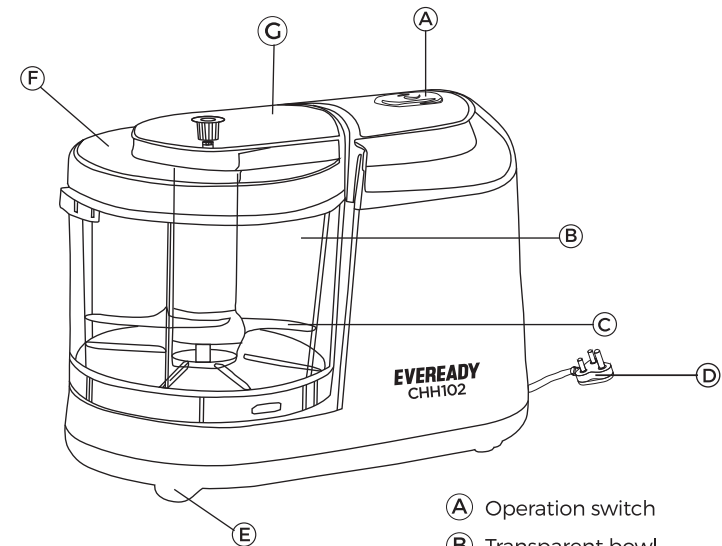

- (A) Operation switch
- (B) Transparent bowl
- (C) Stainless steel blade
- (D) Power cord
- (E) Anti-skid feet
- (F) Lid
- (G) Safety locking mechanism

## BEFORE FIRST USE

- Remove all packing material from the product
- Rotate the lid anti-clockwise to free it from its safety locked position
- Carefully remove the blade
- Now unlock the chopping bowl from the main unit
- Clean all parts under running water with utmost care being taken when handling blades
- After drying, assemble all the parts carefully back into place
- Now your product is ready for use

## CAUTION

- Fill the chopping bowl not uptill the neck; towards optimal results-heavy ingredients like meat, poultry, etc. may be filled to max half the bowl capacity; and lighter other sundry ingredients upto 2/3rd of the bowl
- Large ingredients that need to be chopped, have to be cut to 2cm size approximately
- During operation, if ingredients stick to the side of chopping bowl, use spatula or wooden spoon to crease up the ingredients. Never use your hand or finger as they might get cut
- Do not operate the chopper with any hot ingredient exceeding 60°C temperature

## HOW TO USE

- Open the lid by rotating it anti-clockwise
- Pour / place the ingredients that need to be chopped in the bowl. Pour little water (if needed)
- Place the lid back in place and rotate it clockwise so that the safety locking mechanism gets operated
- Connect power cord to power socket and switch on
- Press the operating switch for chopping. Do not press / operate the chopper for more than 20 seconds in one go. Keep a minimum gap of 3-4 seconds between two consecutive operations
- Once ingredients have reached desired chopping level, switch off the power supply
- Remove the bowl from its locked position and carefully remove lid and blade. Keep them aside before emptying the bowl

## TECHNICAL SPECIFICATION

Model No.	CHOPPER, CHH102
Power	250W
Voltage	230V
Frequency	50Hz