

CAUTION

1. Always disconnect from the main supply before boiling or emptying the Kettle and always switch off the power point when it is not in use.
2. Never immerse your Kettle or power base in water or allow water to come into contact with the terminal pins.
3. Do not allow power base cord to overhang bench or table or get in touch with any hot surface.

TECHNICAL SPECIFICATION

Model No.	ELECTRIC KETTLE, KET503
Capacity	1.0 Ltr
Power	1350W
Voltage	230V
Frequency	50Hz

EVEREADY >>>
INDUSTRIES INDIA LTD.

1, Middleton Street, Kolkata-700071, India
Consumer Care - address as above - Ph. 1800-102-4041
Email: appliancecare@eveready.co.in

EVEREADY

Appliances



ELECTRIC KETTLE



KET503

2YEAR
WARRANTY

1350W

USER MANUAL

* Images are only indicative.
Actual product may differ from the one shown on the carton.


IMPORTANT SAFEGUARDS

This product is designed and intended for household use only.

Please read all the instructions carefully before using Eveready Electric Kettle, even if you are familiar with the product, then also place it handy for ready-reference.

1. Before connecting the appliance to the power-socket, check that the voltage indicated on the appliance (underside the Kettle base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the Kettle.
2. Do not let the cord hang over the edge of a table or counter or in touch of a hot surface.
3. Do not place the Kettle on or near a hot gas or electric burner or a heated oven.
4. Do not operate the Kettle empty to avoid damaging the heating elements.
5. Ensure that the Kettle is used on a firm and flat surface out of reach of children, to prevent the Kettle from overturning, damages or injury.
6. Do not immerse the power cord or plug in water or any other liquid.
7. Avoid contact with the inner spout while water is boiling or has been just boiled.
8. Always take care to pour boiling water slowly and carefully without tipping the appliance.
9. Be careful while refilling when the Kettle is hot.
10. Keep the product out of reach of children at all times. Close supervision is necessary when used by physically challenged person / by people who lack experience in using the appliance.
11. Do not touch the hot surface. Use the handle or the knob.
12. The attached base can not be used for other than intended use.
13. During the operation, wind the excess cord under the base for the purpose of making the distance between the base and the outlet shortest.
14. Extreme caution must be used when moving the appliance containing hot water.
15. The appliance is not a toy. Do not let children play with it.
16. The Kettle is for household use only. Do not use outdoors.
17. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
18. Unplug from the outlet when not in use and before cleaning. Allow the Kettle to cool before putting on or taking off parts, and before cleaning the appliance.
19. To disconnect, turn first the knob to "OFF", then remove the plug from power socket.
20. Do not operate the product when it is damaged or when it works improperly. Bring the product to nearest authorized service facility for testing, repairs or adjustments to avoid hazards.
21. Do not use the appliance for other than intended use.
22. The Kettle can only be used with the stand provided.
23. If the Kettle is overfilled, boiling water may spill out.
24. This appliance is intended to be used in household ambiances:
 - staff kitchen areas in shops, offices and workshops
 - farm houses, hotels, motels, lodging & boarding facilities
25. Do not use any sharp utensil to remove or clean food or any other residue stuck on the inner surface. Use damp soft cloth to remove once the Kettle has cooled down.

PARTS IDENTIFICATION

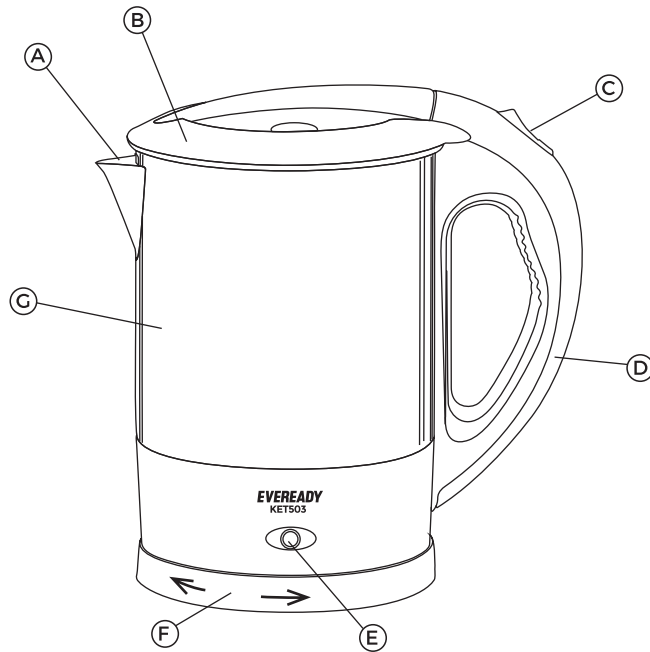

- (A) Water filter
- (B) Easy operational lid
- (C) Lid open button
- (D) Ergonomic handle
- (E) Power on indicator light
- (F) 360° operation
- (G) Stainless steel body

TO FILL

Fill the maximum level as marked on the outer body of the Kettle.

DO NOT OVERFILL

As water may overflow upon boiling

BOILING WATER

1. Place the Kettle

Place the Kettle with the spout facing away from you. Gently lift off the lid.

2. Fill the Kettle

Fill the Kettle with as much as fresh cold water as you will need. The maximum amount of water to be used is indicated by the 'MAX FILL' level.

3. Close the lid

Position your Electric Kettle with its spout facing away from you. Replace lid on the Kettle.

4. Place Kettle on the power base

Place the Kettle on the power base so the element on the bottom of the Kettle sits securely on the power base.

5. Power "ON"

Depress the power "ON" switch by gently pushing down until a "click" is heard. When the water has boiled, the Kettle will automatically switch "OFF".

NOTE: The Kettle can be switched off at any time before the water boils simply by lifting the Kettle off the base.

6. Pour and Serve

If you wish to re-boil the water, pour water slowly and return the Kettle to the base after pouring.

CLEANING

1. When cleaning, inside of the Kettle with water, then add 5 ml of white vinegar to boil for 5-10 minutes.
2. Switch off. Remove the plug. Empty the Kettle, then re-clean at least three times to remove residue particles.