

**EVEREADY**  
*Appliances*



**MULTIFUNCTION  
KETTLE**



**EVEREADY >>>**  
**INDUSTRIES INDIA LTD.**

1, Middleton Street, Kolkata-700071, India  
Consumer Care - address as above - Ph. 1800-102-4041  
Email: [appliancecare@eveready.co.in](mailto:appliancecare@eveready.co.in)

**KET504**

**2 YEAR  
WARRANTY**

**1200 W**

**USER MANUAL**

\* Images are only indicative.  
Actual product may differ from the one shown on the carton.

## IMPORTANT SAFEGUARDS

 
This product is designed and intended for household use only.

Please read all the instructions carefully before using Eveready Multifunction Kettle. Even if you are familiar with the product then also place it handy for ready-reference.

1. Before connecting the appliance to the power-socket, check that the voltage indicated on the appliance (underside the kettle base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
2. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
3. Do not place the kettle on or near a hot gas or electric burner or a heated oven.
4. Do not operate the kettle empty to avoid damaging the heating elements.
5. Ensure that the kettle is used on a firm and flat surface out of reach of children, to prevent the kettle from overturning, damages or injury.
6. Do not immerse the power cord or plug in water or any other liquid.
7. Avoid contact with the inner spout while water is boiling or has been just boiled.
8. Always take care to pour boiling water slowly and carefully without tipping the appliance.
9. Be careful while refilling when the kettle is hot.
10. Keep the product out of reach of children at all times. Close supervision is necessary when used by physically challenged person / by people who lack experience in using the appliance.
11. Do not touch the hot surface. Use the handle or the knob.

12. The attached base can not be used for other than intended use.
13. During operation, wind the excess cord under the base for the purpose of making the distance between the base and the outlet shortest.
14. Extreme caution must be used when moving the appliance containing hot water.
15. The appliance is not a toy. Do not let children play with it.
16. The kettle is for household use only. Do not use outdoors.
17. The use of accessories, which are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
18. Unplug from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
19. To disconnect, turn first the knob to "OFF", then remove the plug from power socket.
20. Do not operate the product when it is damaged or when it works improperly. Bring the product to nearest authorized service facility for testing, repairs or adjustments to avoid hazards.
21. Do not use the appliance for other than intended use.
22. The kettle can only be used with the stand provided.
23. If the kettle is overfilled, boiling water may spill out.
24. This appliance is intended to be used in household ambiances:
  - staff kitchen areas in shops, offices and workshops
  - farm houses, hotels, motels, lodging & boarding facilities
25. Do not use any sharp utensil to remove or clean food or any other residue stuck on the inner surface. Use damp soft cloth to remove once the kettle has cooled down.

## PARTS IDENTIFICATION

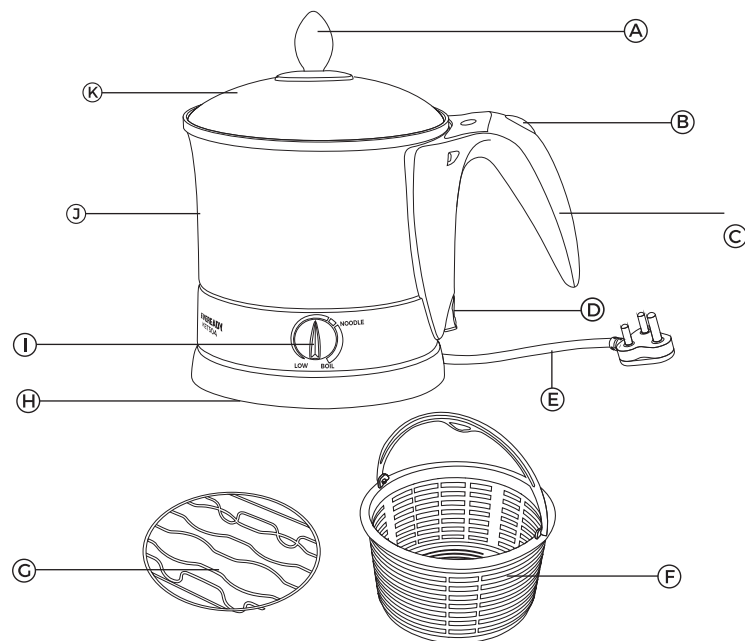

- A Lid Handle
- B Indicator
- C Handle
- D Switch
- E Power Cord

- F Basket
- G Wire rack
- H Power Base
- I Temperature Knob
- J Body
- K Glass lid

## BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean it before use by boiling a full kettle of water twice and then discarding the water. Wipe the surface with a dry cloth.

**NOTE:** The max capacity of kettle is 1.0 Ltr

 
## OPERATION OF YOUR KETTLE

### I. Boiling Water

- To fill the kettle, remove it from the power base, then remove lid handle and fill with the desired amount of water. Then replace the lid. The water level should not exceed max marks or sit below min level.

**NOTE:** Do not fill water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging in.

- Position the kettle on the power base.
- Connect the plug into a power outlet.
- Turn the temperature knob to the “boil” position (see Fig. 1). Press down the switch, the indicator will light up. The water will start to boil. You can shut off the power by turning off the switch at any moment during the boiling process. If you want to boil water again, turn on the switch directly to restart the kettle.

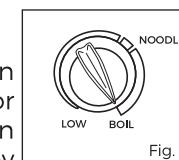

**NOTE:** Ensure that switch is free of obstructions, as the kettle will not turn off if the switch is constrained.

- The kettle will switch off automatically once the water is boiled, and the indicator will blink out.
- Then lift the kettle and pour the water.

**NOTE:** Operate carefully when pouring the hot water from your kettle as boiling water may result in scald. Besides, don't open the lid while the water in the kettle is hot.

- The kettle will not re-boil until the switch is pressed again.
- The kettle may be stored on the power base and always disconnect the power supply when not in use.

## BOIL-DRY PROTECT

Should you accidentally let the kettle operate without water, the boil-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water for re-boiling.

 
## II. Keeping Warm

1. If the boiling water or food items in the kettle has cooled down, turn the temperature knob to the desired temperature position.
2. Connect the plug into a power socket. Press down the switch, the indicator will be lit-up. The water will be heated and will keep warm automatically at the desired temperature.

**Note:** The indicator will blink out but it will not switch off the power automatically, when the keep warm mode is over. So close supervision is necessary when keep warm mode is in use. Lift the switch by hand after the indicator has extinguished. The temperature starts increasing, when the knob is turned in clockwise direction.

## III. Cooking Instant Noodles

1. First boil water according to the BOILING WATER section.
2. Open the lid by lifting the lid handle, put the instant noodle into the boiled water, and close the lid.
3. Turn the temperature knob to the "Noodle" position (see Fig.2). After about 8-10 minutes, the instant noodles is ready. Lift the switch, then open lid and pour out the noodles. You can season before serving.

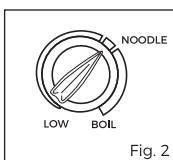

### Note:

1. It is suggested not to season the noodles in the kettle to facilitate the cleaning.
2. Do not fill water over the maximum level.
3. The quantity of instant noodle is 1 bag (the weight is less than 85gm).
4. When the temperature knob is on the "Noodle", do not leave the appliance unattended, as the appliance cannot shut off automatically.
5. When the noodle is cooked, the metal parts of appliance is hot, so it is suggested to pour the noodle in a bowl and add ingredients to serve.
6. When the appliance is operating, never open the lid to avoid burning.

## CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, cord and power base in water, or allow moisture to come in contact with these parts.
2. Wipe the body with a damp cloth or cleaner. Never use a poisonous cleaner.

**CAUTION:** Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to protect the gloss finish.

## REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle so as to cause the operation to become less efficient. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternately, you may follow below instructions of using white vinegar.

1. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight.
2. Discard the mixture in the kettle, then fill the kettle with clean water, boil and discard the water. Repeat several times until the odour of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

## TECHNICAL SPECIFICATION

Model No.	MULTIFUNCTION KETTLE, KET504
Capacity	1.0 L
Power	1200W
Voltage	230V
Frequency	50Hz