 


# EVEREADY

Appliances



## TABLE, WALL & PEDESTAL FANS

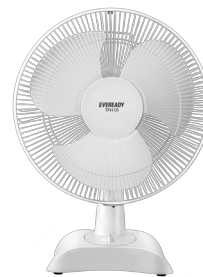

TFH 01  
TFN 02\*



WFH 01  
WFN 02\*



PFH 01  
PFN 02\*

**EVEREADY** >>>  
INDUSTRIES INDIA LTD.

1, Middleton Street, Kolkata-700071, India  
Consumer Care - address as above - Ph. 1800-102-4041  
Email: [appliancecare@eveready.co.in](mailto:appliancecare@eveready.co.in)

**2 YEAR**  
WARRANTY

**USER MANUAL**

\*Available as regular speed models.  
\* Images are only indicative.  
Actual product may differ from the one shown on the carton.

## IMPORTANT SAFEGUARDS

This product is designed and intended for household use only.

Please read all the instructions carefully before using Eveready Table, Wall and Pedestal fans, even if you are familiar with the product then also keep it handy for future reference.

1. Assemble the fan before switching it on.
2. Disconnect the fan before moving from one location to another.
3. Do not insert fingers, pencils or any other object through the guard when the fan is running.
4. Do not use fan near an open window. Rain water may cause electrical hazards.
5. Place it on a stable flat surface when operating.

 
## ASSEMBLY & OPERATION




Step - 1



Step - 2

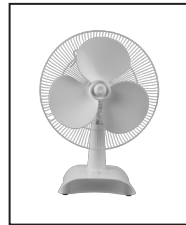

Step - 3

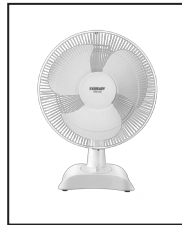 

Step - 4

Assembling Blades and Grill

## ASSEMBLY & OPERATION

### ASSEMBLY INSTRUCTIONS FOR BLADES AND GRILL

- Unscrew the spinner clockwise and plastic nut counter clockwise before removing both of them
- Set the back guard in proper position with handles up
- Screw the plastic nut tightly to attach the back guard
- Install the blade on to the motor shaft until it reaches the retaining pin
- Secure both guards tightly with the plastic ring before tightening the screw at the bottom of the ring

### ASSEMBLY OF TABLE FAN

- Insert the stand to the base
- Fix the nut at the bottom of the base to secure the pipe firmly

 
### ASSEMBLY OF WALL FAN

- Attach the mounting bracket firmly to the wall
- Mount the fan to the bracket by the clamp from behind the stand

### ASSEMBLY OF PEDESTAL FAN


- Attach the pipe to the base
- Fix the nut at the bottom of the base to secure the pipe firmly
- Pull out the inner pipe and tighten the height adjustment knob
- Place the fan body on the inner pipe and tighten it properly with the knob

## PARTS IDENTIFICATION

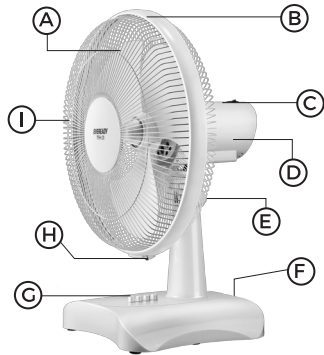


- (A) Blade
- (B) Handle
- (C) Oscillation Switch
- (D) Motor
- (E) Vertical Tilt Adjustment Screw
- (F) Base
- (G) Speed Control Switch
- (H) Grill Lock
- (I) Grill

## PARTS IDENTIFICATION

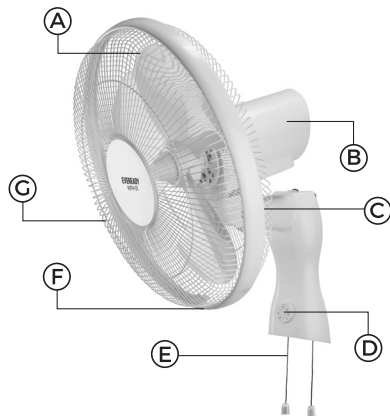 

- (A) Blade
- (B) Motor
- (C) Vertical Tilt Adjustment Screw
- (D) Speed control button
- (E) Pull String for speed control
- (F) Grill Lock
- (G) Grill

## PARTS IDENTIFICATION

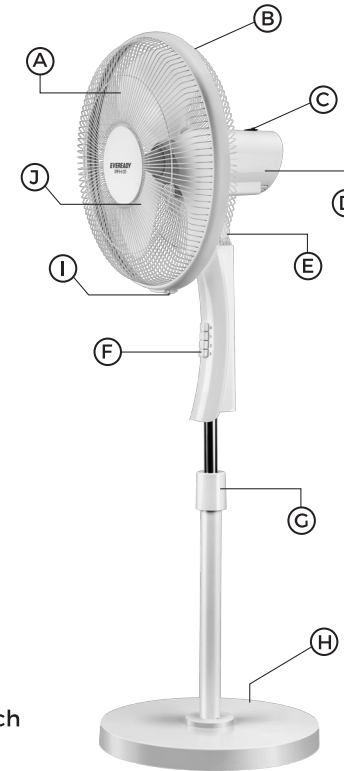 

- (A) Blade
- (B) Handle
- (C) Oscillation Switch
- (D) Motor
- (E) Vertical Tilt Adjustment Screw
- (F) Speed Control Button
- (G) Height Adjustment Lock
- (H) Base
- (I) Grill Lock
- (J) Grill

## TABLE FAN

### OPERATING INSTRUCTIONS

- Plug the power supply cord into the wall outlet for 230V, 50Hz, AC Supply
- Control the Speed by pressing the push buttons
- To start / stop fan oscillation, push down / pull up the oscillation knob / switch
- Adjust the airflow upward and downward after loosening the tilting knob; push the guard lightly to the desired angle and tighten the tilting knob

## WALL FAN

### OPERATING INSTRUCTIONS

- Plug the power supply cord into the wall outlet for 230V, 50 Hz, AC supply
- Adjust the desired speed by pulling the string
- To start or stop the fan oscillation, pull the string
- Adjust the airflow upward and downward after loosening the tilting knob; push the guard lightly to the desired angle and tighten the tilting knob

## PEDESTAL FAN

### OPERATING INSTRUCTIONS

- Plug the power supply cord into the wall outlet fo 230V, 50 Hz, AC supply
- Control the speed by pressing the push buttons
- To start / stop fan oscillation, push down / pull up the oscillation knob / switch
- Adjust the airflow upward and downward only after loosening the tilting knob; push the guard lightly to the desired angle and tighten the tilting knob

## TECHNICAL SPECIFICATION

Model No.	TFH 01	WFH 01	PFH 01
Power	95W	95W	95W
Voltage	230V, 50 Hz	230V, 50 Hz	230V, 50 Hz
Air Delivery	95 CMM	95 CMM	95 CMM
Speed	2100 RPM	2100 RPM	2100 RPM

Model No.	TFN 02	WFN 02	PFN 02
Power	65W	65W	65W
Voltage	230V, 50 Hz	230V, 50 Hz	230V, 50 Hz
Air Delivery	81 CMM	81 CMM	81 CMM
Speed	1350 RPM	1350 RPM	1350 RPM